
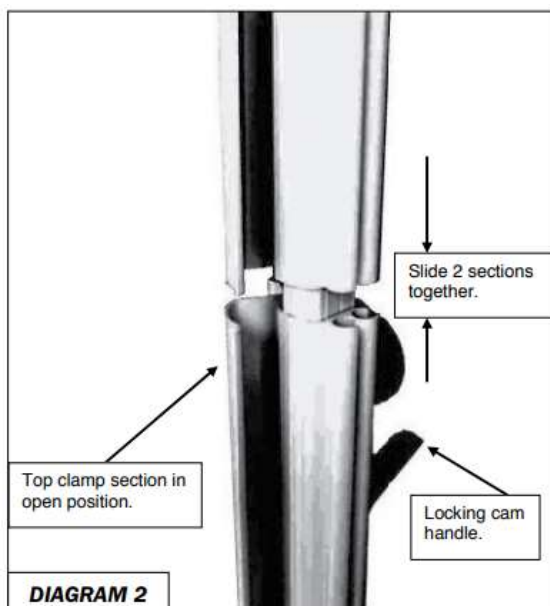




Set Up Instructions for AFK

1. Erect awning as per manufacturer's instructions. Height of legs, need to be set at the pre-determined height, to suit the Annexe wall measurements.
(Refer diagram 1)
2. Ensure the sail track groove in roller, is set at the 3 o'clock position at right end of drum or 9 o'clock position at left end of drum. This position will allow water to runoff the awning.

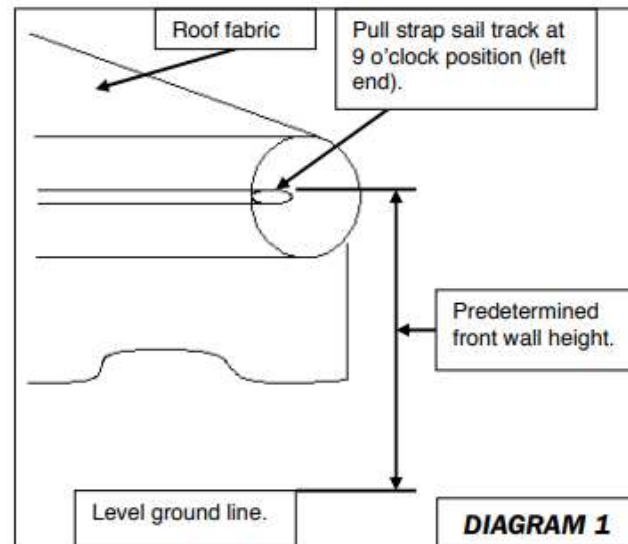

3. Unpack AFK from carton. Select the two sections which fit to the roof rail brackets on caravan. These 2 sections have a joiner piece fitted inside which are installed upside down for packaging purposes. Remove the 2 set screws, slide the joiner piece out, reverse the direction and re-fix in place using the original set screws. Release the locking cam handles and ensure the top clamp section of the AFK is in the open position. Now slide on the spigot end sections of the AFK and join together (Refer diagram 2)

4. Fit the hook end into the roof rail bracket on van, ensuring the top clamp section of the AFK is in the open position. Lift the AFK up until it rests just under the awning fabric. Extend the AFK out until the spigot fits into the hole in the roller. Fully extend the AFK and tighten the knurl knob. (**Refer diagram 3,3A,3B**)

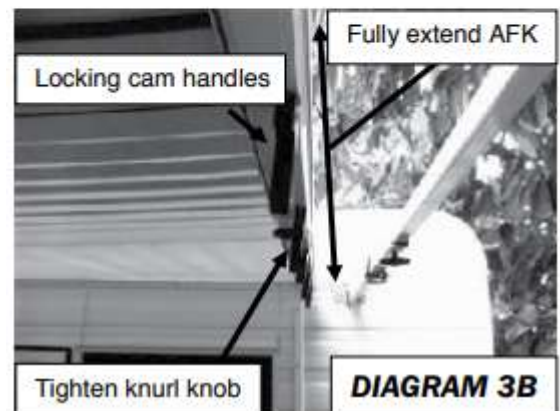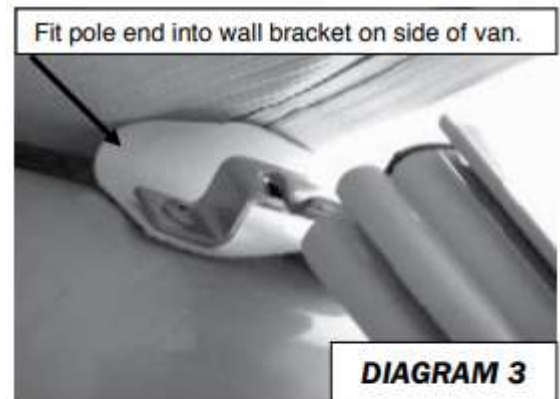

5. With one hand, hold the fabric on top of the AFK at the gap in middle of 2 AFK sections, then tighten the locking cam handles with the other hand (refer diagram 3B). Make sure awning fabric is securely clamped by AFK (**Refer diagram 4**)

