



SET UP INSTRUCTIONS FOR AFK & RV WALLS

1. Erect awning as per manufacturers instructions. Height of legs need to be set at the pre-determined height to suit the wall measurements.
2. Ensure the sailtrack groove in roller is set at 3 o'clock (right end) or 9 o'clock (left end). This position will allow water to runoff the awning (refer diagram 1).

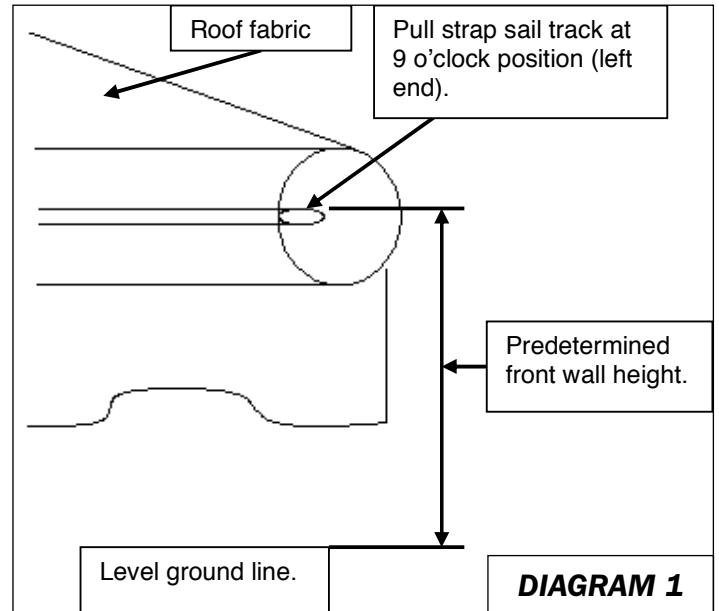

3. Unpack AFK from carton. Select the two sections which fit to roof rail brackets on caravan. These 2 sections have a joiner piece fitted inside which are installed upside down for packaging purposes. Remove the 2 set screws, slide the joiner piece out, reverse the direction and re-fix in place using the original set screws. Release the locking cam handles and ensure the top clamp section of the AFK is in the open position. Slide the 2 sections of the AFK together (refer diagram 2).

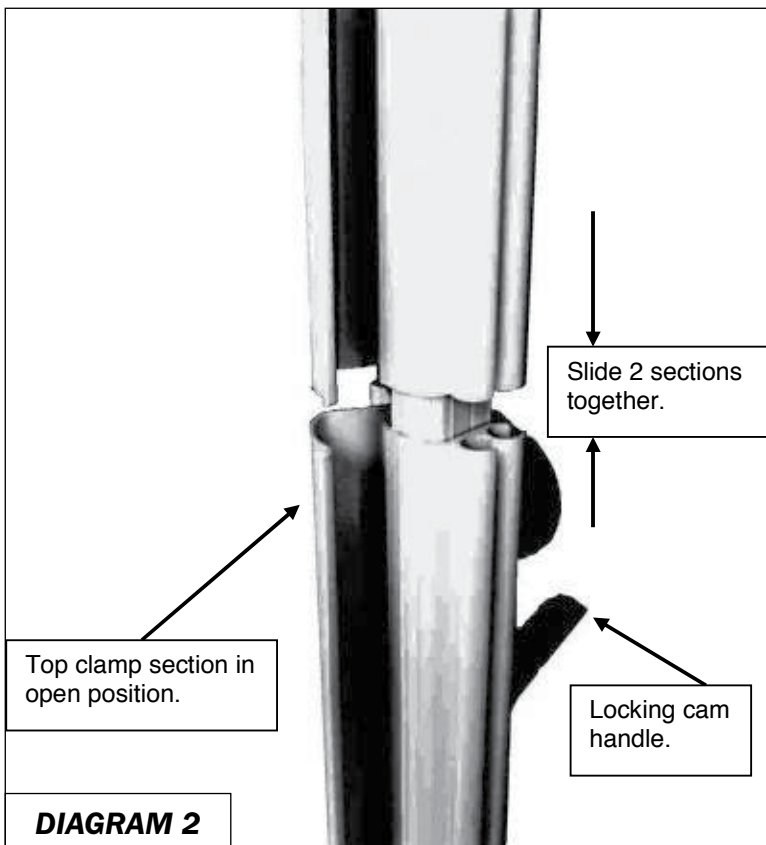

4. Fit the pole end into the roof rail bracket on van, ensuring the top clamp section of the AFK is in the open position. Lift up the AFK until it rests under the awning fabric. Extend the AFK out until the spigot fits into the hole in the roller. Fully extend the AFK and tighten the knurl knob. (refer diagram 3, 3A, 3B).

Fit pole end into wall bracket on side of van.

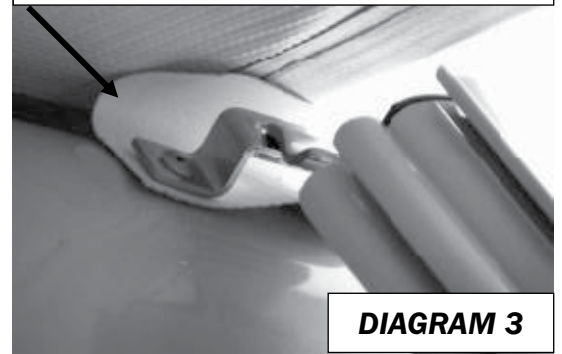


DIAGRAM 3

Extend AFK and fit spigot into hole in roller.


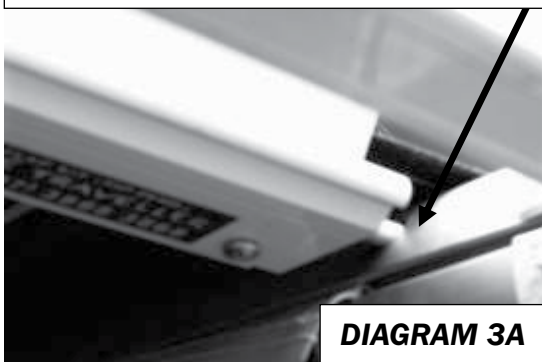


DIAGRAM 3A

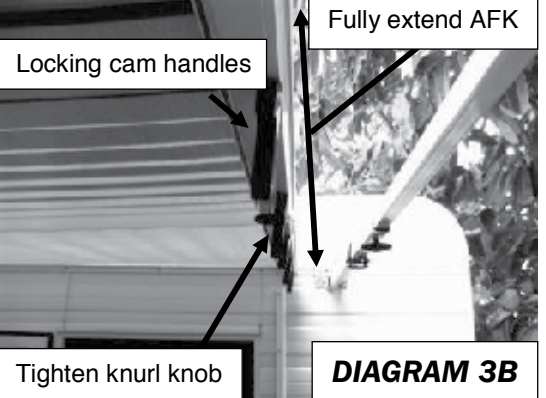

Locking cam handles

Fully extend AFK

Tighten knurl knob

DIAGRAM 3B

5. Hold the fabric position on top of the AFK at the gap in middle of 2 sections with one hand then tighten the locking cam handles with the other hand (refer diagram 3B). Make sure awning fabric is securely clamped by AFK (refer diagram 4).

ATTACHING WALLS

1. If your van is a pop top install top draught skirt first. Slide into rope track then press stud to pop top roof.
2. Feed the long wall into sailtrack groove on roller (adjust awning legs to suit wall height).
3. Feed top of end walls into AFK (start in centre gap of AFK).
4. Feed side of end wall down rope track on van.
5. Join corner of end wall to long wall via Velcro strip.

TIP: If you have a full caravan you may find it easier to attach end walls to AFK before you install AFK to caravan: Slide top of wall into AFK then feed the side up the rope track (starting at bottom). Install AFK as per above instructions.

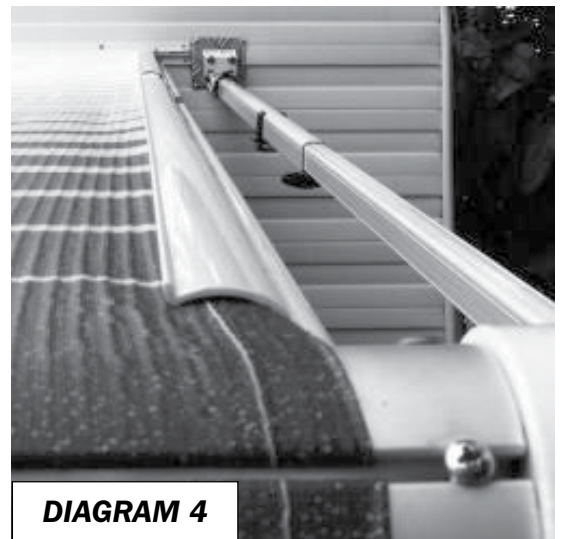


DIAGRAM 4